



## Install Printer Driver for Cougartron SP100 Stencil Printer

This guide shows you how to install the printer driver for your SP100 Stencil Printer. First, go to the USB and open the folder named 'Install\_Printer\_Driver'. And then find the application called 'PrinterInstall'. Open and run this application.

After you will see this window. Click 'Next'.

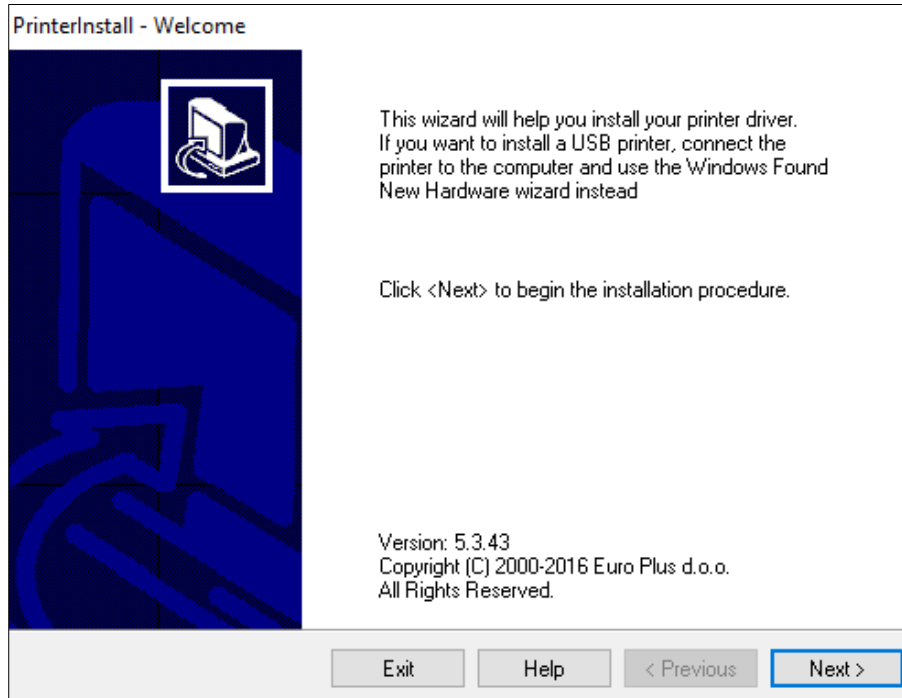


Click 'Install Printer'

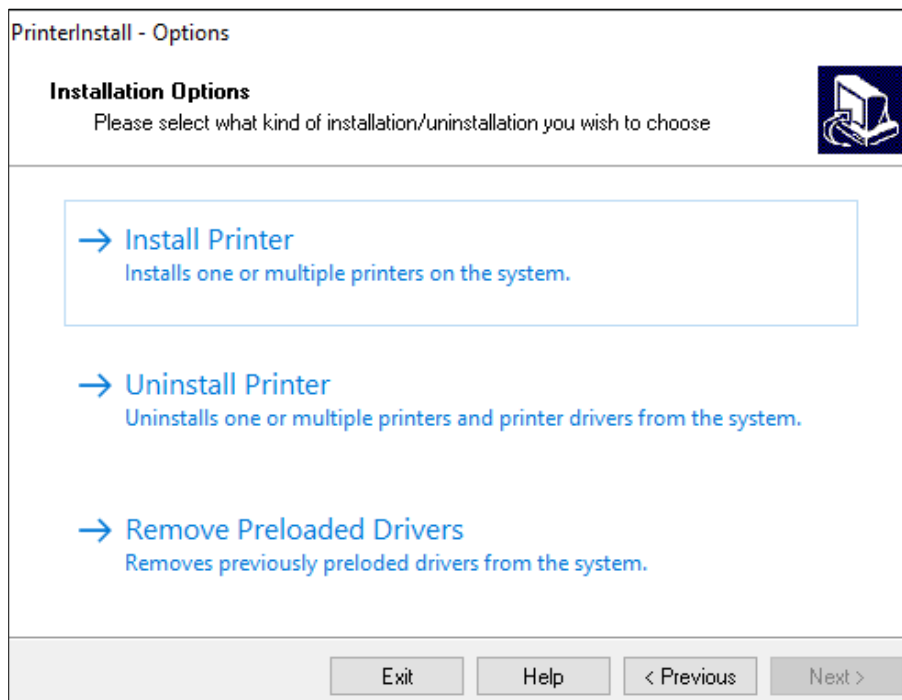

Agree to the terms and conditions and click 'Next'.

PrinterInstall - License Agreement

**License Agreement**  
Please read the following license agreement carefully.



**NICELABEL PRINTER DRIVERS - WINDOWS  
DRIVERS FOR THERMAL PRINTERS**  
LICENSE AND LIMITED WARRANTY

NiceLabel Printer Drivers are true Windows printer drivers that can be used for label printing by the NiceLabel software products or any third-party Windows application. Optimal results and fastest printout speeds can be best obtained from the NiceLabel software products.

The only two allowable distribution channels of NiceLabel Printer Drivers are from the NiceLabel CD-ROM/DVD and downloadable distributions on the NiceLabel website (<http://www.nicelabel.com>). You may not distribute, lease or rent NiceLabel Printer Drivers


I accept the terms in the license agreement  
 I do not accept the terms in the license agreement

Exit Help < Previous **Next >**

Select 'Rongta RP4xx Series' and click 'Next'.

PrinterInstall - Selecting the printer

**Select Printer**  
Please select the manufacturer and printer you want to install.



Select the manufacturer and model of your printer. If the driver is in a different folder or your printer came with a driver media, click <Change location>. If your printer is not listed, consult your printer documentation for a compatible printer.


Manufacturers:  
Rongta

Printers:  
Rongta RP2xx Series  
Rongta RP3xx Series  
Rongta RP4xx Series  
Rongta RP5xx Series  
Rongta RP8xx Series

Change location...

Exit Help < Previous **Next >**

You may get this warning. Read it and ensure everything is OK before clicking 'Next'.

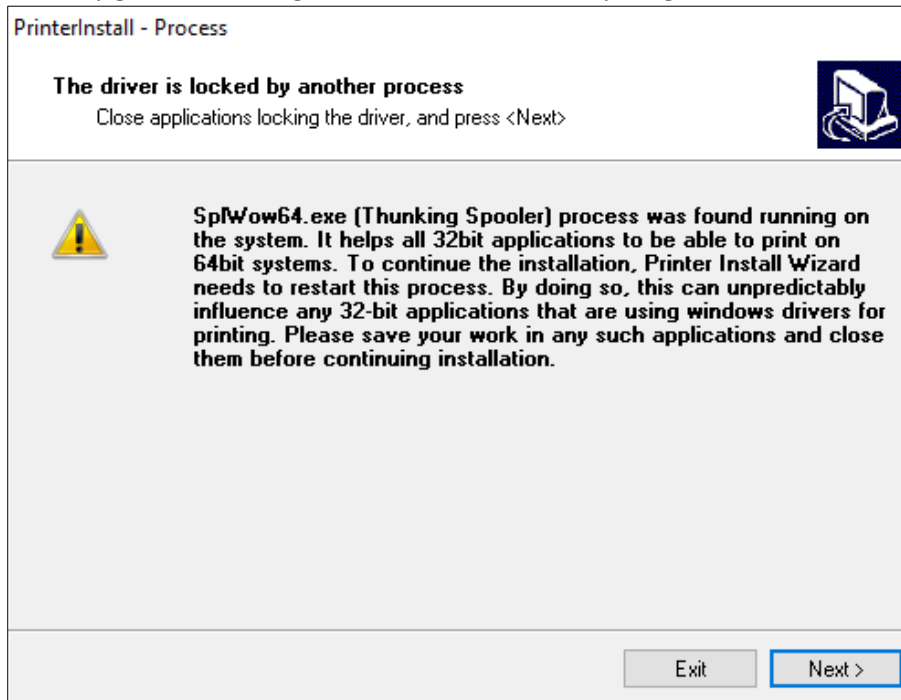


Now the printer drivers should be installed.

## Install NiceLabel for Cougartron SP100 Stencil Printer


This guide shows you how to install NiceLabel software on your computer. NiceLabel is used to design and print your stencils.

First, go to the USB and open the folder named 'Install NiceLabel'. Find the application called 'NiceLabelDesignerSE6'. Open and run this application.


Next, choose your language:

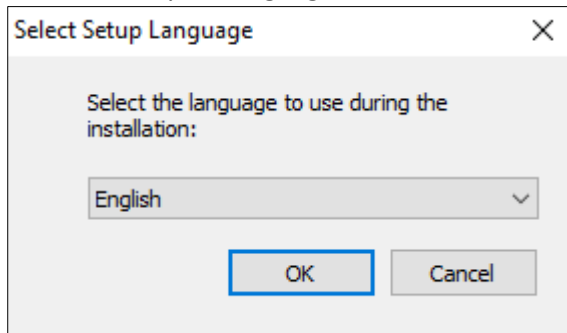


Click 'Next'.

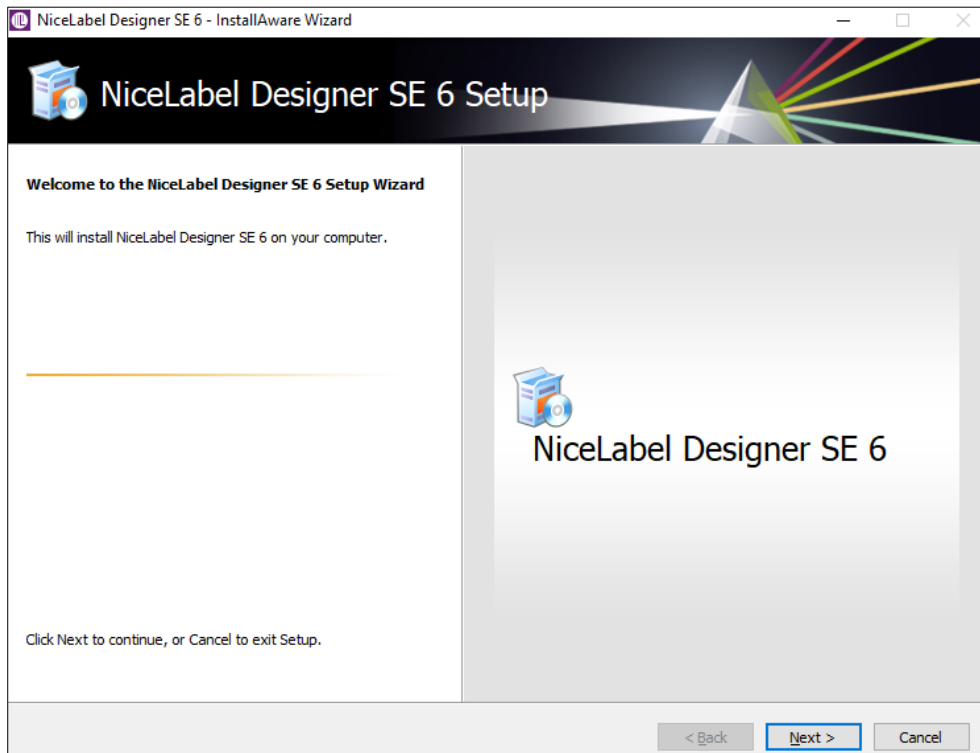


Agree to the terms and conditions and click 'Next'.

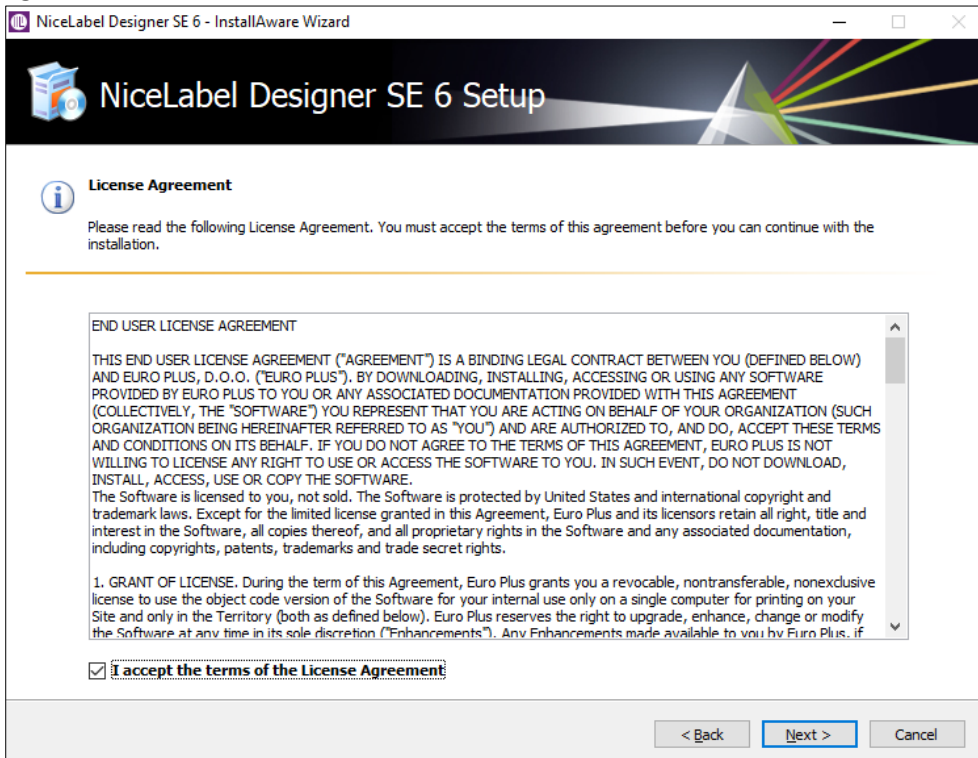

Click 'Install'.

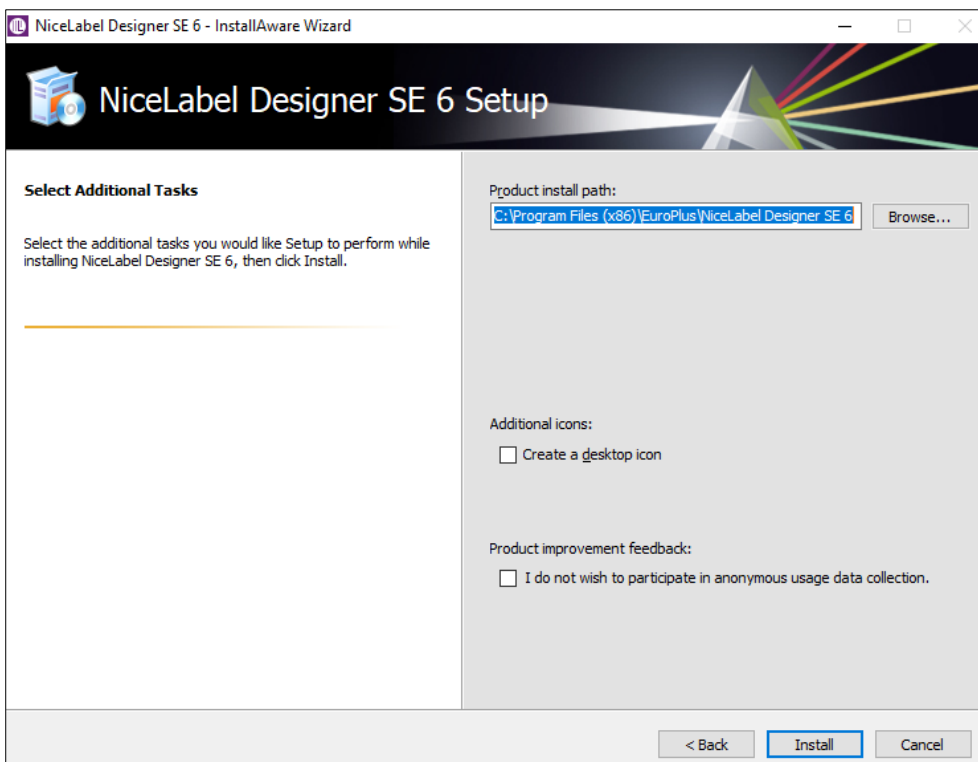

Click 'Finish'

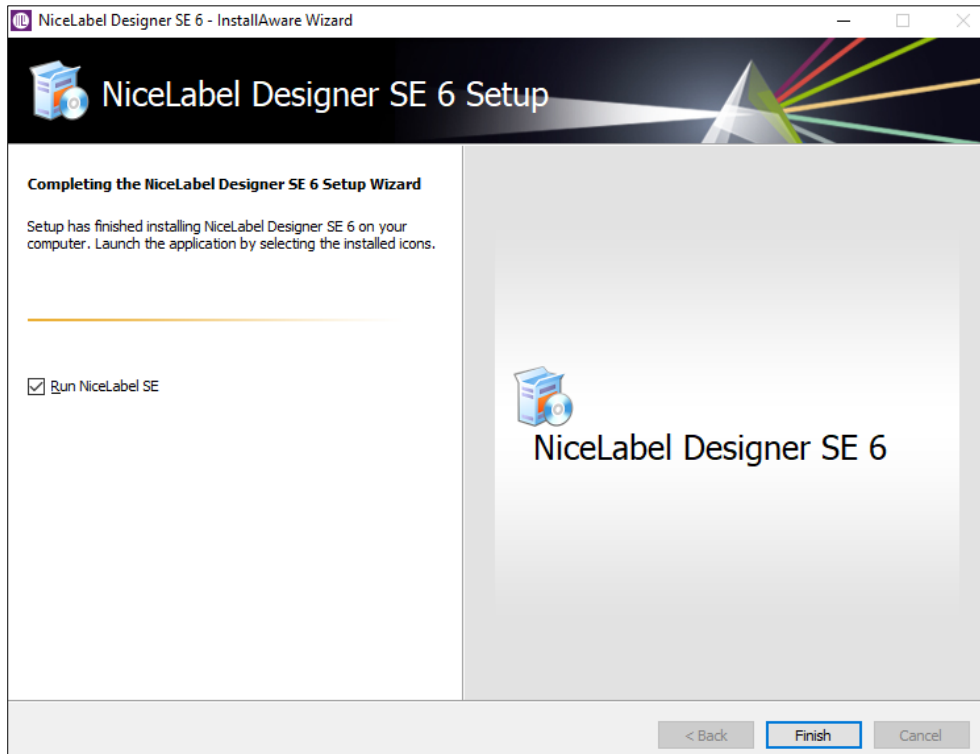

Now NiceLabel software is installed on your computer.

## Configure NiceLabel for Cougartron SP100 Stencil Printer

This guide shows you how to configure NiceLabel software to be able to print stencils for electrolytic marking when used together with the Cougartron SP100 Stencil Printer.


For more generic information about setting up the software for other applications/print media, please visit: [www.nicelabel.com](http://www.nicelabel.com).

Pages 1-3 show how to set up a stencil label when you start NiceLabel for the first time.  
Pages 4-5 show how to set up specific printer parameters for optimal printing of stencils.


When opening NiceLabel for the first time, you will see this message. Click 'Continue'.



Select 'Create a new label' and then click 'Finish'.

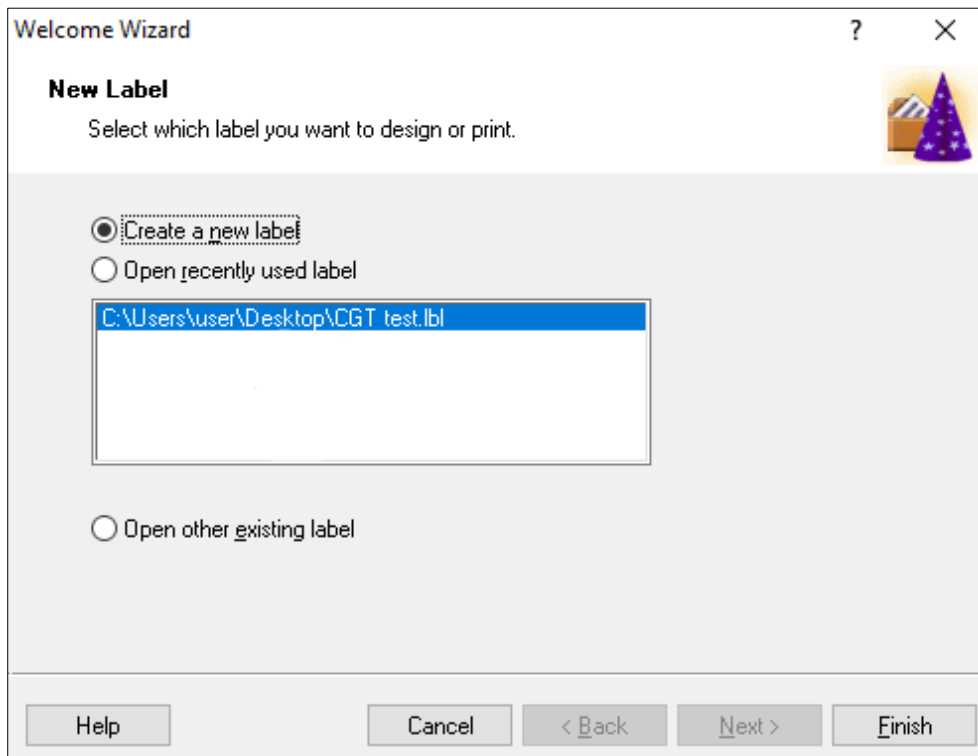


Click 'Next'.

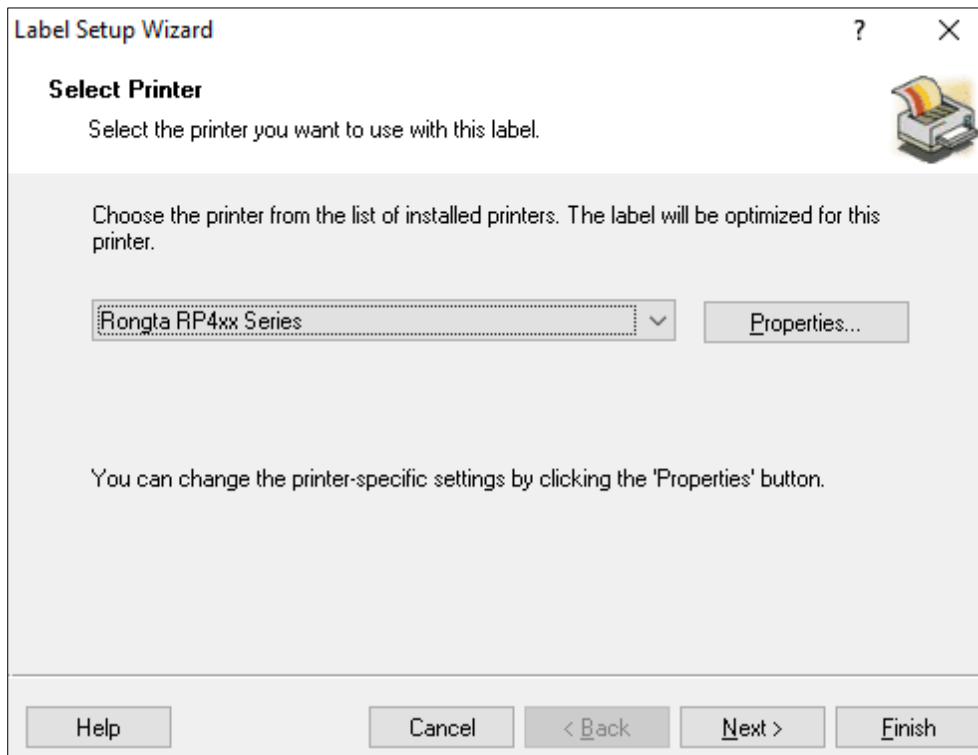




Choose your personal preference between 'Portrait' and 'Landscape' and 'Rotated' and then click 'Next'. These settings can be changed later, but if in doubt leave the settings as shown.

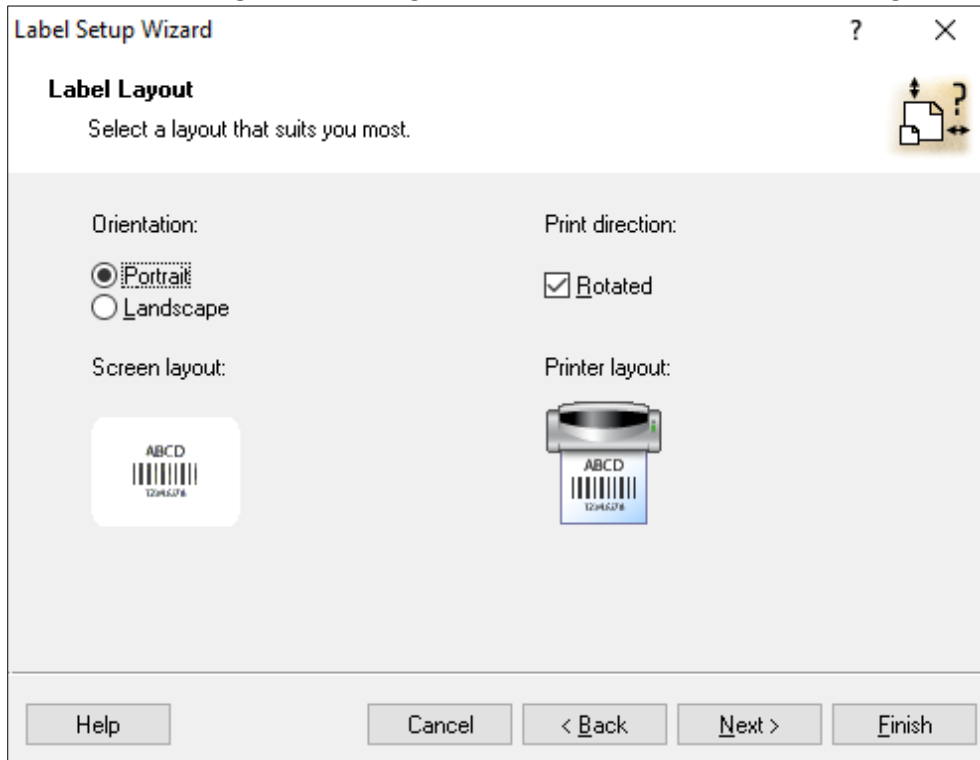

Depending on the Stencil Ribbon you have purchased, type in the label width. Unit of Measure can be changed by clicking the 'Unit of measure:' button. Then click 'Finish'.

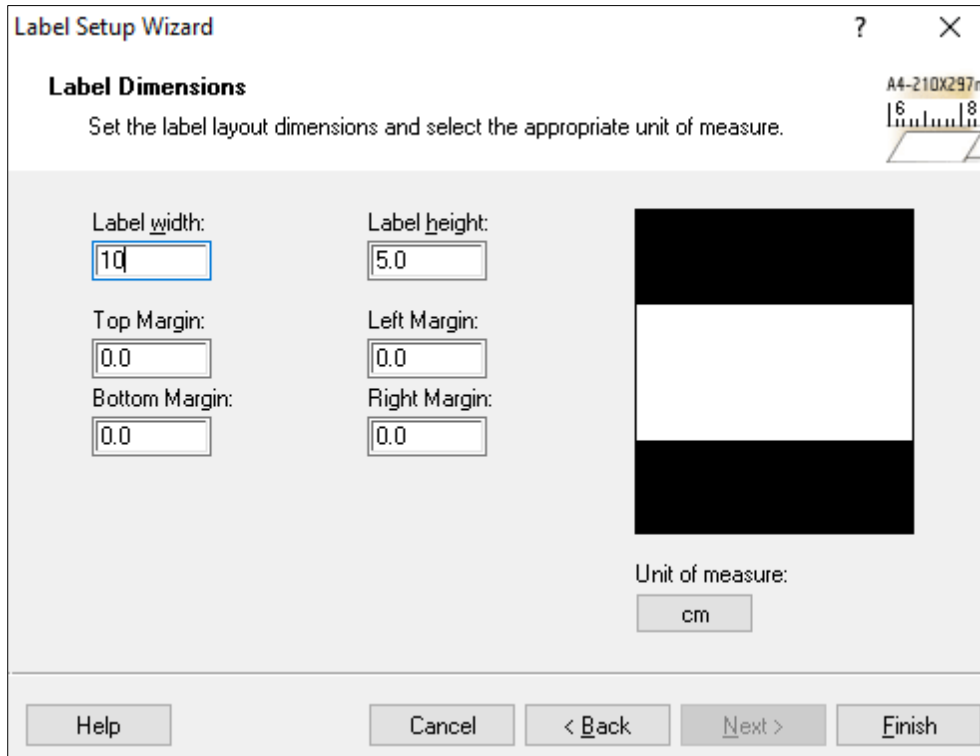


Once the label has been set up, then you need to configure the printer settings/properties to ensure the stencil prints out correct. Go to 'File' > 'Printer Settings'.


Adjust the 'Speed' to the lowest setting - 50mm/s or 5cm/s or 2in/s

Adjust the 'Darkness' to 5.

Under 'Size' you can adjust the size of the label. The label width is determined by the width of the stencil ribbon printing media in the printer, so this can not be adjusted.

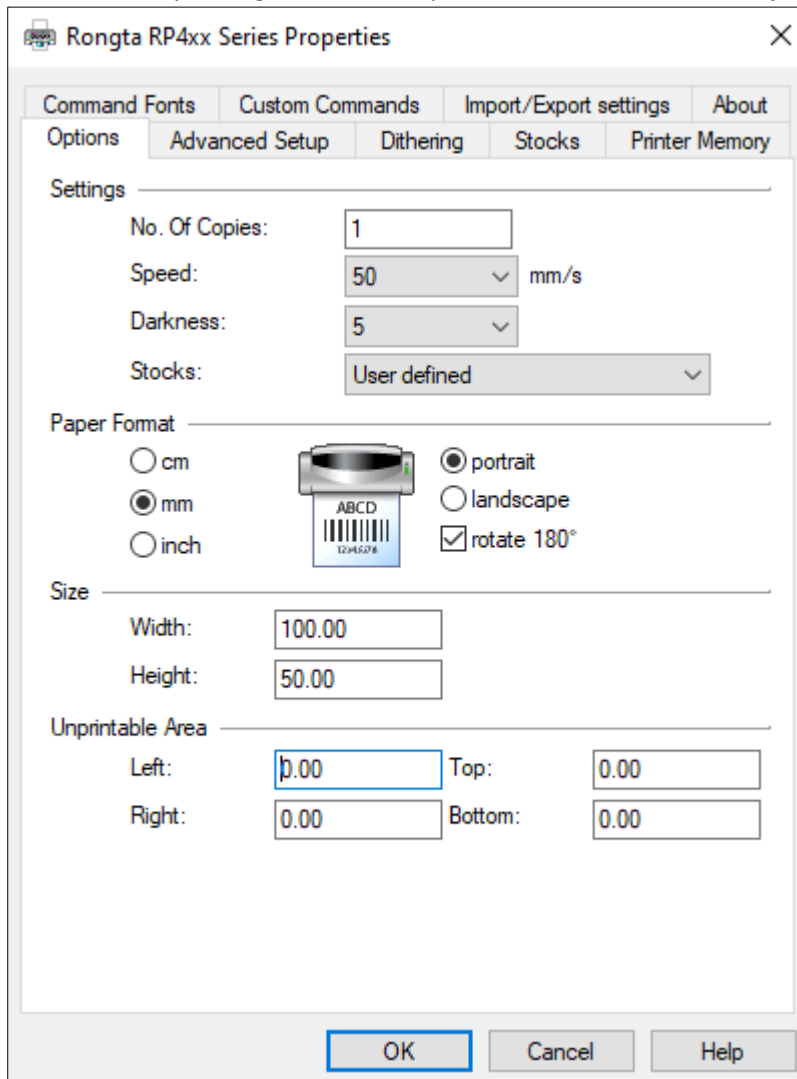

Change 'Sensor\_type' to 'Continuous'.  
Change 'Media\_settings' to 'Direct\_thermal'.  
Change 'Options' to 'Cut\_every'

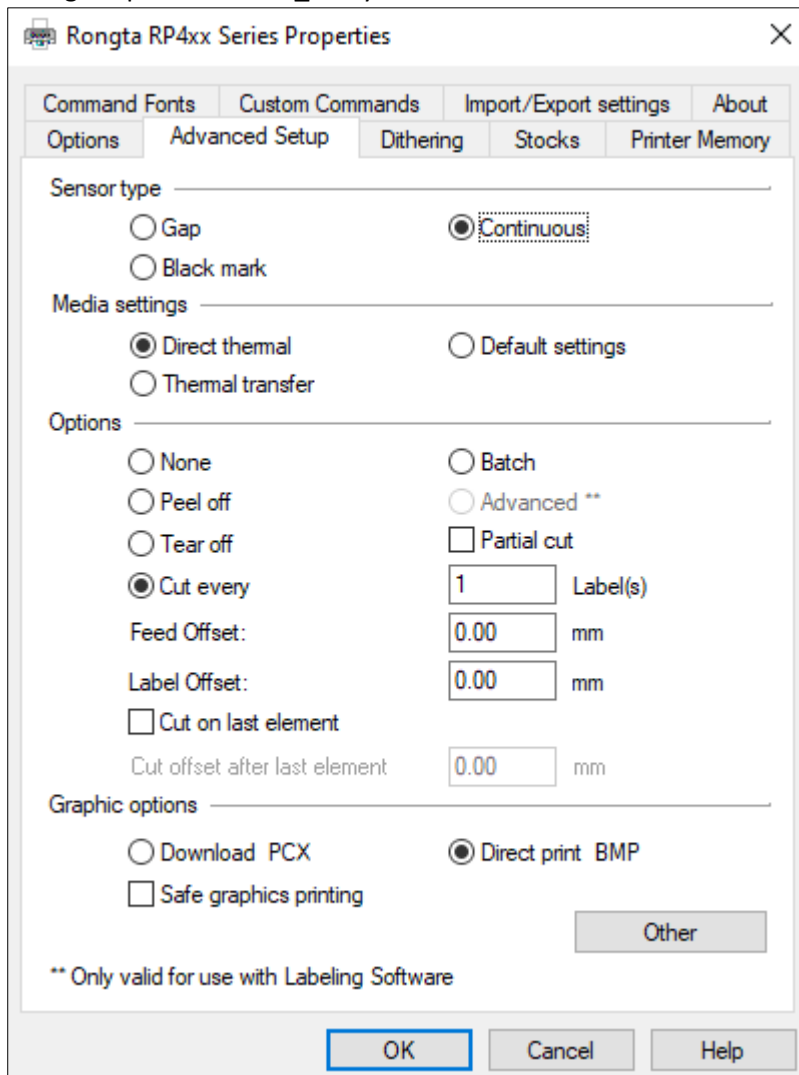

Then click 'OK'. The settings are now saved in NiceLabel for printing stencils. To ensure these settings stay the same next time you start the NiceLabel application, it is recommended to change these settings in the Windows settings as well. To do this, go to:

'Windows Start' > 'Printers&Scanners' > 'Rongta RP4xx Series' > 'Manage' > 'Printing Preferences'

Then go back to page 4 and make the same changes to the settings.

You are now ready to print stencils with your Cougartron SP100 Stencil Printer.